

Which Remote Shutter Release Cable do I need?

	If you want ...		
	Just Full Press Simple Remote Trigger	Remote Half-press	Locked Half-Press at the camera
	Then you need this kind of remote shutter release cable...		
Radio			
Plus III	Any	Stereo (-ACC) required	Stereo (-ACC) + PTMM Adapter Pre-Trigger (-P)
PlusX	Any	-not available-	Stereo (-ACC) + PTMM Adapter Pre-Trigger (-P)
FlexTTS*	Any*	Stereo (-ACC) required*	Stereo (-ACC) + PTMM Adapter* Pre-Trigger (-P)*
MultiMAX Top Port	Mono (Basic) Stereo (-ACC) + MSMM Adapter Pre-Trigger (-P) with switch off	-not available-	Stereo (-ACC) + PTMM Adapter Pre-Trigger (-P)
MultiMAX Bottom Port	Stereo (-ACC) required	Stereo (-ACC) required	Stereo (-ACC) + PTMM Adapter Pre-Trigger (-P)
Plus II	Mono (Basic) Stereo (-ACC) + MSMM Adapter Pre-Trigger (-P) with switch off	-not available-	Stereo (-ACC) + PTMM Adapter Pre-Trigger (-P)